## **Topway Combined Lockshield and Flow Meter**

The combined lockshield and flow meter is a two stage device. The lockshield provides individual port isolation and the flow meter regulates flow rate.

## To fully open the port for filling and flushing:


First stage: to open the lockshield rotate the collar anticlockwise approx. 3.5 turns.

Second stage: rotate the black nut on the flow meter anticlockwise approx. 3 turns.

## Locking the flow rate:

Once the manifold flow rates have been set, pop up the collar to lock the setting.

- 1. First stage lockshield open only. Red collar turned anti-clockwise only.
- 2. Second stage flow meter open only. Flow meter turned anti-clockwise only.
- 3. First stage lockshield and second stage flow meter both in closed position
- 4. First stage lockshield and second stage flow meter both in fully open position

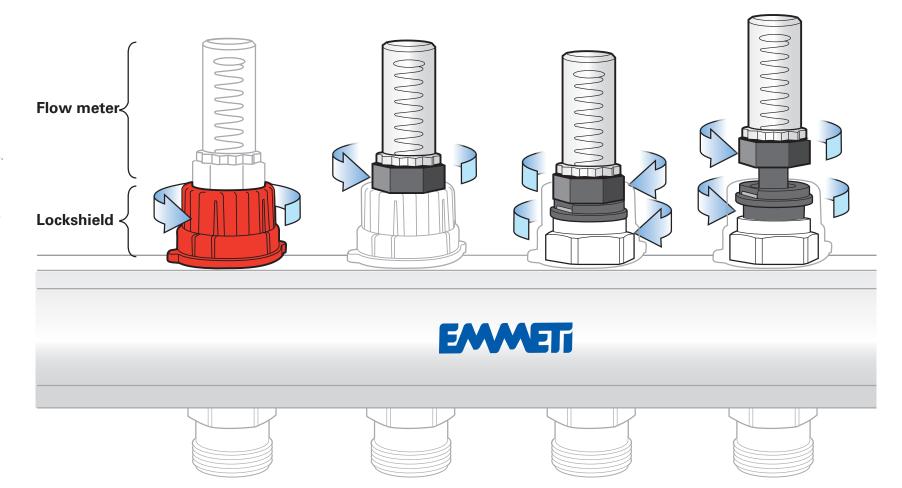

## **Emmeti UK**

6 Tannery Yard, Witney Street, Burford, Oxfordshire, OX18 4DW

T +44 (0) 1993 824900 F - W www.emmeti.co.uk E s

F +44 (0) 1993 824990 E sales@emmeti.co.uk

